



LUDLUM MEASUREMENTS, INC
501 OAK STREET, P.O. BOX 810
SWEETWATER, TEXAS 79556
325-235-5494, FAX: 325-235-4672

M3xxx Series Firmware Update Instructions

This document specifically addresses updating firmware on the Model 3003, 3003i, 3014, 3078, and 3078i. If you have any questions, please contact your local sales representative or contact Ludlum Measurements, Inc. at 800-622-0828 before proceeding.

Written by:

Date: 07FEB22

Approved by:

Date: 27FEB22

GENERAL

The newest generation of Model 3000 series instruments (Gen 2) has greater capabilities than its predecessors. With this greater capability comes the need to store more information than ever before. As a result, new procedures are needed to update instrument firmware in the field.

WARNING

The Ludlum Lumeric Firmware Updater is free to our customers and may be used to update the firmware on particular instruments to add or change currently available features. It is important to note that the changes may or may not be able to be reversed. While Ludlum Measurements has taken great care to develop firmware updates that will not affect current instrument calibration, it is still recommended that all firmware updates be performed prior to instrument recalibration. As a result, if you have any concerns before proceeding, contact your local sales representative or Ludlum Measurements, Inc at 800-622-0828.

PROCEDURE

Equipment Required:

- Ludlum Lumatic Firmware Updater (available for free from the Ludlum Measurements, Inc. website at the link provided below)
 - https://ludlums.com/images/stories/firmware_updates/Lumatic_FirmwareUpdater_Installer.msi
- USB cable A male to A male (Ludlum P/N 22-9150)
- Text Editor

- (1) Install the latest version of Ludlum Lumatic Firmware Updater.
- (2) Turn on the device to be updated.
- (3) Connect the USB cable between the device and computer.
- (4) Wait until the USB driver has been successfully installed. (This may take a short time, or up to 5 minutes.)
- (5) Open the Lumatic Firmware Updater and select the “Model 3xxx Series” from the ‘*Connected instrument*’ box.
- (6) Select **File ▼**, **Save Parameters to a File** and be sure to name the parameter file something unique. (There will be a pause as it connects and retrieves all of the appropriate information.)

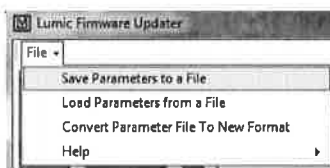


Figure 1 Save Parameters to a File

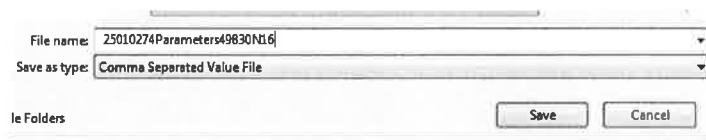


Figure 2 Comma Separated Value File Name

- (7) Open the comma separated value file, that was just created, using a text editor and search for the following parameters and record the results:

- a. *Dev_FW* (F.2.1.1000, F.3.0.1084, etc.)
- b. *Dev_HW[0]_Name* (5519-001, 5519-305, etc.)

Note: Leave the file open as it will need to be edited.

```


Dev_Cnt_AudioMode,Off
Dev_Cnt_DisplayMode,Timer
Dev_Det_Retain,On
Dev_DIPSw[0],0
Dev_DIPSw[1],0
Dev_FW,F.3.0.1084
Dev_HW[0]_Ch,2
Dev_HW[1]_Ch,1
Dev_HW[2]_Ch,0
Dev_HW[0]_Name,5519-305
Dev_HW[1]_Name,5519-187
Dev_HW[2]_Name,N/A
Dev_HW[0]_Port,0
Dev_HW[1]_Port,1
Dev_HW[2]_Port,255

```

Figure 3 Device Firmware Number

- (8) If the *Dev_FW* value determined in step 7(a) is 2.0.xxxx or less, stop now and contact your sales representative or Ludlum Measurements, Inc. before proceeding.
- (9) Edit the file from step 7.
 - a. Save the parameter file a second time with a new name that will help indicate that the file has been edited. (Upon completion, two copies of the same file will be saved on the computer; however, this file will now be edited.)
 - b. Return to the first line of the file.
 - c. Search for '*Dev_*' to find the beginning of the device parameters, skipping the detector parameters ('*DetMem[x]_...*') in the process.
 - d. Delete all remaining lines of the file, leaving only the list of parameters beginning with '*DetMem[x]_*' as well as time and date.

- e. Save the file.
- (10) From our website, (<https://ludlums.com/products/all-products/product/model-3000#firmware-updates>) download the latest version of firmware associated with your instrument and save the desired new firmware file to your computer. Please note that the value determined in Step 7 is the printed circuit board number that will be needed when downloading the appropriate firmware. (ex. 5519-305_M3XXX_A-F.3.0.1084.lmzip)
- (11) Select **Browse** on the main screen and select the new firmware file to be loaded from step 10. Once the desired firmware is selected, click **Open**.

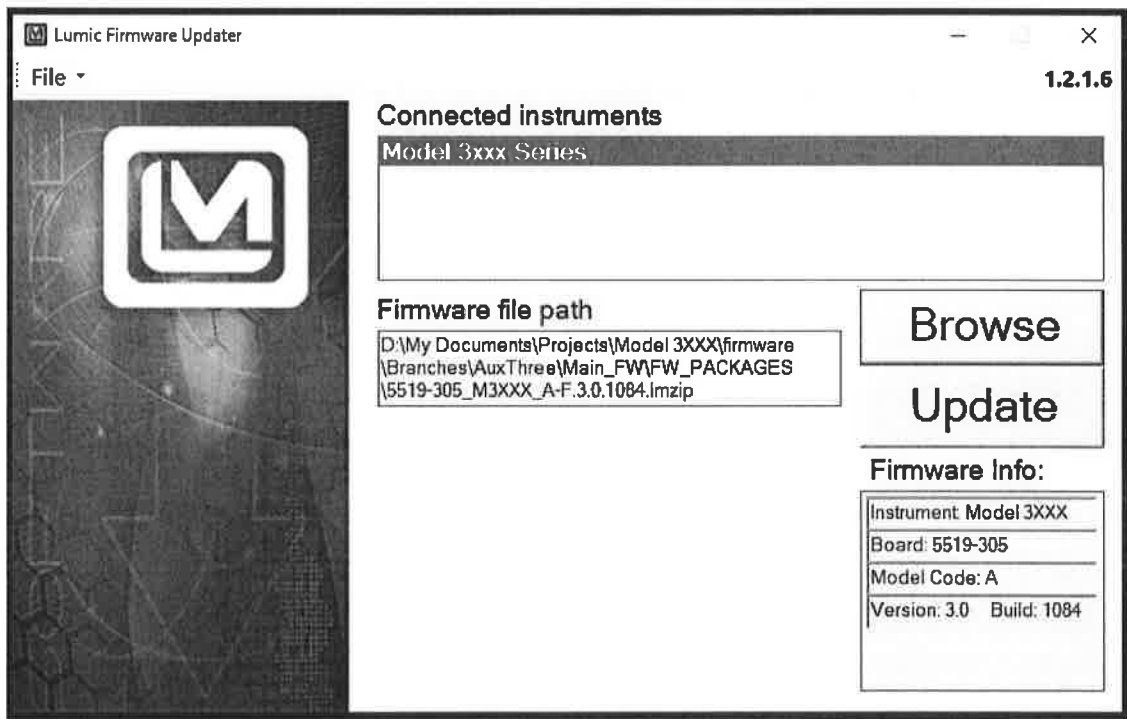

- (12) Select the **Update** button on the main screen.
- a. Once the file has finished loading, the instrument will restart and the device will disappear from 'Connected instruments' on the Lumeric Firmware Updater screen.

- (13) When the instrument reappears on the Lumatic Firmware Updater screen, select the “Model 3xxx Series” from the ‘*Connected instruments*’ box.
- (14) Select **File ▼, Load parameters from a file.**
- (15) Select the parameter file saved in step 9 (the edited file) and select **Open.**

Note: No error messages should pop up. If they do, it may be an indication of a problem with the saved data or the instrument. For instance, the previously saved value may now be outside of the available parameter limits for the latest firmware release and the parameter will need to be reconfigured before proceeding. Stop and contact your local sales representative or Ludlum Measurements, Inc. if you have any concerns.

- (16) Review parameters and instrument operation including performing a simple check source test to confirm instrument operability.