

Model 2401-S Pocket Size Survey Meter



Ludlum Measurements, Inc.


Features

- Self-Contained Survey Instrument
- Internal Scintillator Detector
- Audible & Visual Alarms
- Simple to Use
- Low Cost
- CE Certified

Introduction

The Model 2401-S is a pocket sized, self contained survey meter with an analog display for measuring low-level gamma exposure. The unit uses a cesium iodide (CsI) detector integrated inside the instrument, and comes with a built-in audio and visual alarm. The metallic case, convenient size, and low price make this an ideal tool for checking ambient levels in a wide variety of applications.

Each time the Model 2401-S is turned on, it measures background radiation levels and automatically determines the alarm setting. If the radiation levels exceed this setting, the alarm audio will beep every 1/8 second and the lamp will flash.

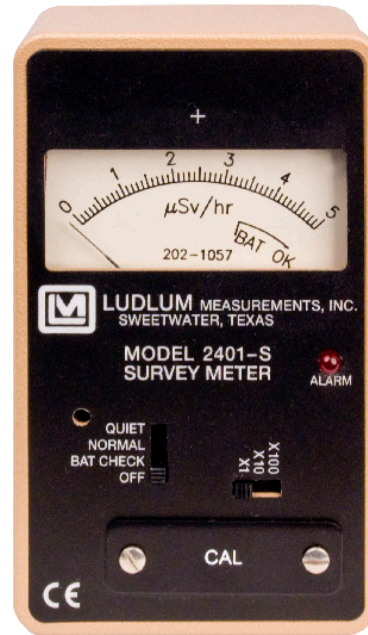

Part Number: 48-3117

Specifications

INDICATED USE: low-level gamma and X-ray survey

DETECTOR: 18 mm diameter cesium iodide (CsI) scintillation crystal

RANGE: 0–5000 μ R/hr

SENSITIVITY: 100 cpm/ μ R/hr (137 Cs)

ENERGY RESPONSE: energy dependent

RESPONSE TIME: typically 5 seconds from 10% to 90% of final reading

METER DIAL: 0–50 μ R/hr (0–0.5 μ Sv/h), others available; BAT OK

MULTIPLIERS: x1, x10, and x100

AUDIO: click-per-event, may be turned off by moving selector to QUIET position

POWER: one 9-volt battery

BATTERY LIFE: typically 250 hours with alkaline battery at normal background levels

CONSTRUCTION: drawn and cast aluminum with membrane panel

SIZE: 4.6 x 8.4 x 13.5 cm (1.8 x 3.3 x 5.3 in.) (H x W x L)

WEIGHT: 0.4 kg (0.9 lb), including battery

ALARM: Detected radiation in excess of the alarm point will trigger a red Alarm LED and audible beep, whether in NORMAL or QUIET operating mode.

Options

Belt Clip (Model L-4397-176), metal clip

Handle (Model L-4397-165-01), convenient L-shaped handle

Case (Model L-2310517), zippered nylon case with web belt loop

Case (Model L-2311119), rugged water, dust, & crush resistant case

Wrist Strap (Model L-4397-182), woven nylon lanyard with clip



Ludlum Measurements, Inc. P.O. Box 810, Sweetwater, Texas 79556

Web: <http://www.ludlums.com> Tel: 800-622-0828 / 325-235-5494 / Fax: 325-235-4672 / Email: ludlum@ludlums.com

Note: specifications subject to change without notification. We are not responsible for errors or omissions.

Sept 2015